




PH-2L-HW Hot Water Condensate Pump 100°C

The Pump House 2 litre high temperature tank pump is manufactured from heat resistant plastic to withstand temperature of 100°C. The 5.5m discharge lift helps with the flexibility of the installation. Suitable for both floor and wall mounting and comes with a quick release check valve.

- Fully automatic operation
- Floor and wall mounted options
- High temperature plastic construction
- Low noise motor with thermal protector
- Quick release 90°C turn check valve
- 3 inlet holes
- Height 166mm Length: 286mm Width: 1350mm 0
- One year warranty



Max Flow Rate:	400 l/hr
Discharge:	10mm I.D.
Liquid Temp:	100°C
Max Suction Lift:	5.5 m (cut-off – no flow)
Electrical:	230V 50Hz, 117W, 1.6A

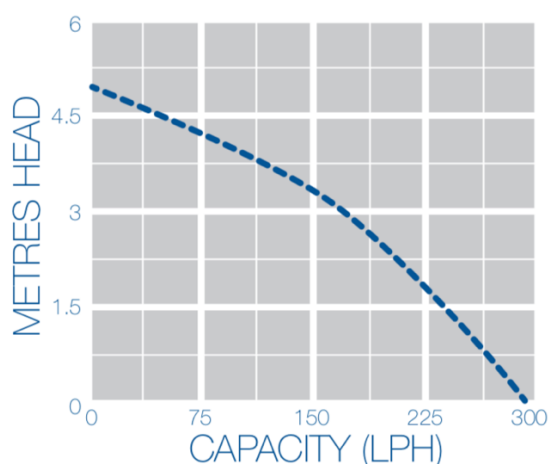

**THE MOST COMPACT - LOW
PROFILE HOT WATER
CONDENSATE PUMP EVER!
CAN HANDLE A GENUINE
100°C**

Note: Pump comes with a screw in Check Valve



PH-3-8L-HW Hot Water Condensate Pump 100°C

PH-3-8L-HW hot water condensate pump. Fully automatic with high-level alarm designed to remove hot water and condensate from boilers and de-humidifiers. Designed to handle water levels up to 100°C

Fully automatic operation with high level alarm

- Australian conditions tested
- wires can handle boiling water 100°C
- Tank Capacity 3.8 litres
- PSI 17.5
- Screw-in check valve is already screwed in...so no siphoning back
- Height:249mm Length: 325mm Width: 160mm

Max Flow Rate:	312 L/hr
Max Shut off:	8m
Discharge:	10mm
Liquid Temp:	100°C
Max Lift:	5.5 m
Electrical:	230V 50Hz, 150W, 0.75A



**THE BEST VALUE COMPACT
HOTWATER CONDENSATE PUMP
ON THE MARKET**

- 10M OF BRAIDED TUBE
 - SCREW IN CHECK-VALVE
- ALL INCLUSIVE

CAN HANDLE A GENUINE 100°C



PH-3.8L-HW and PH-2L-HW

INSTALLATION

1. This condensate pump is designed for pumping away condensate from condensing boilers, PRV discharge and high temperature water up to 100°C. The pump is controlled by a float / switch mechanism which turns the pump on to discharge the condensate when approximately 57mm of condensate collects in the tank. The pump switches off automatically when the tank drains to approximately 19mm, giving a drink cycle of 1.5 litre.
2. This pump is carefully packaged, inspected and tested to ensure safe operation and delivery. When you receive the pump, examine it carefully to determine that there are no broken or damaged parts that may have occurred during shipment. If damaged has occurred, please contact your supplier. They will assist you in replacement or repair, if required.
3. Read the instructions carefully before attempting to install, operate or service the pump. Know the pump application, limitations and potential hazards. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage! Please retain these instructions for future reference. Installation and connections are to be made by a qualified person.
4. If installed for combined boiler condensate & PRV discharge, this pump is only suitable for boilers up to 42kW.

SAFETY

1. Do not use to pump flammable or explosive fluids such as petrol, fuel oil, kerosene, etc. Do not use in explosive atmospheres. This pump should be used with liquids compatible with the pump component materials.
2. Do not handle the pump with wet hands or when standing on a wet or damp surface, or in water. To reduce the risk of electrical shock, be certain that the electrical supply is connected to a permanent EARTH.
3. For installations where property damage and/or personal injury might result from an inoperative or leaking pump due to power cuts, discharge line blockage, or any other reason, a backup system and/or alarm should be used.
4. Support the pump and piping when assembling and when installed. Failure to do so may cause piping to break, pump to fail, motor bearing failures, etc




INSTALLING THE PUMP


1. Carefully unpack the pump.
2. The pump is designed to be floor standing and it is essential that the pump must sit on a level surface. If installing on bare floor boards, to reduce noise transmission, it is advisable to place the pump onto a noise absorbing material (such as underlay or carpet).
3. The pump should not be installed in a manner that will subject it to splashing or spraying.
4. PRV discharge can be routed through a tundish before entering the pump, if required.

ELECTRICAL CONNECTIONS

1. Shut off electrical power at fuse box for both the pump and equipment before making any connections. All wiring must comply with appropriate codes.
2. Connect the pump to voltage specified on label located on the pump:
Live - BROWN
Neutral - BLUE
Earth - YELLOW / GREEN
3. If separate fused spur or plus is used, a 3.0 Amp fuse is recommended.
4. Connection of the high level safety switch / potential free contact must be made to either the 240v circuit volt free equipment connector or an audible alarm. The pump is fitted with a 240v micro switch (max current rating 3A), which will activate if the pump starts to overfill in the event of outlet pipe blockage or pump failure. The following wiring diagrams show how the switch can be connected into a boiler circuit or a separate audible alarm.

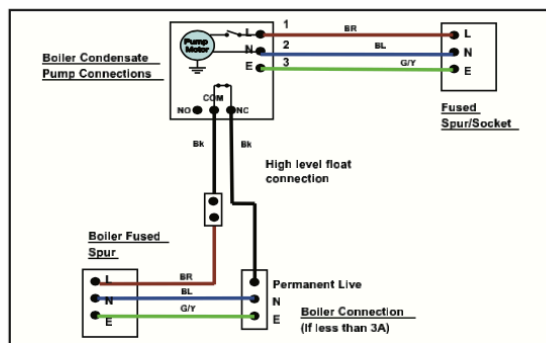

Boiler connection to the high level safety switch

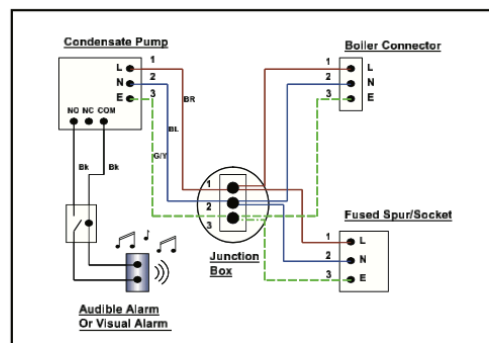



Audible alarm connection to the high level safety switch



DRAIN CONNECTION

INLET CONDENSATE DRAIN CONNECTION

1. Position the pump beneath the equipment / unit so that condensate or high temperature outlet flows into the pump inlet freely (use either of the two openings provided). When hot water at pressure is connected always use a tundish prior to entering the pump.
2. The inlet pipe should be positioned as close to the bottom of the tank as possible and the bottom cut at an angle of greater than 30° to ensure the free flow of the condensate from the boiler.
3. If the pump is to be used for both boiler condensate & PRV discharge, the copper PRV pipe should only be inserted at least 35mm (but no greater than 45mm) into the tank inlet.

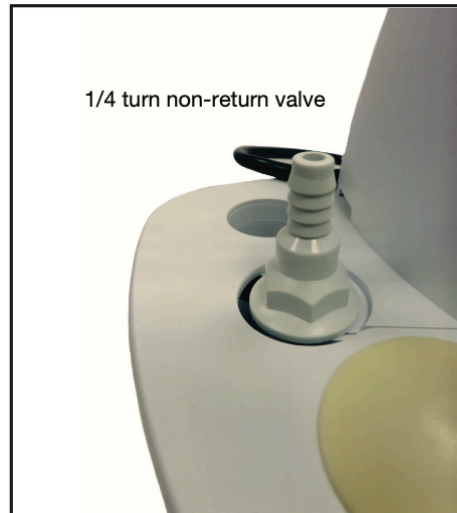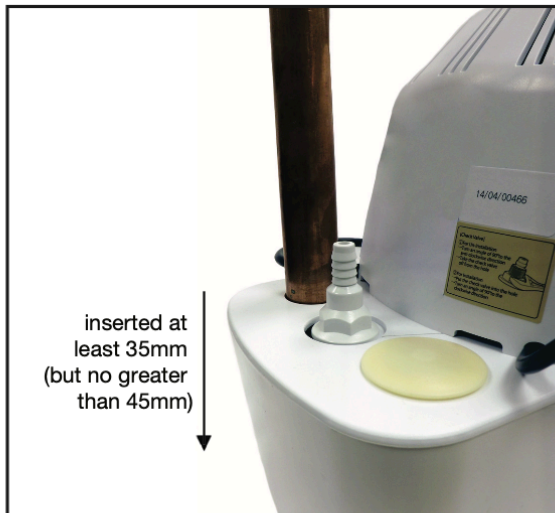

OUTLET CONDENSATE CONNECTIONS

1. Connect the 3/8" I.D tubing to the discharge adapter / non return valve. For best result, secure tubing with clamp but do not pinch, or restrict the tubing. The non return valve has a quick release mechanism with a 1/4 turn bayonet type fitting.
2. Tubing should rise vertically but not exceed the maximum shut off head (pumping height) of 8 metre above the pump. Any horizontal runs should be taken into consideration when assessing the maximum shut off. This shut off will be reduced if bends and horizontal runs are included in the outlet pipe work. If in doubt please contact Pump House for advice.
3. At highest point angle tubing horizontally and create a downward slop to drainage point. So not bend sharply or twist the tubing in a way that might result in collapse or restriction of the tubing. Creating a downward slope will allow condensate to drain by gravity and keep tubing empty.
4. If not possible to create a downward slope, try to create an inverted "U" trap directly above the pump at the highest point.



COMMISSIONING & TESTING

1. Before commissioning, check for debris in the tank. Remove any material which might block the drain line or drain into the pump tank.
2. Turn on power and slowly fill the tank with clean water, as the float rises to the on level position the motor should turn on.
3. Leave the clean water in the tank as this will effectively prime the pump ready for use and help to prevent any flue products passing through the pump from the boiler condensate drain pipe.

This pump is designed for use with condensing boiler applications. Caution must be taken to ensure acidity of condensate does not increase below the average pH of 2.8 (to prevent localised pocket of acid that acts like a battery causing pitting) by routinely cleaning or flushing tank with fresh water.

MAINTENANCE & SERVICING

1. Before servicing the pump, disconnect the electric power at the fuse box for both the pump and the equipment unit.
2. It is recommended that the pump be checked every six months for proper operation. It is important to check for debris which may cause a blockage to the pump discharge adapter/non return valve. Check for proper free movement of pump float and switch and check for free, unrestricted movement of motor and fan.
3. Clean the holding tank and float with warm water and mild soap. Rinse completely when finished.
4. Check the inlet and outlet piping. Clean as necessary. Be sure there are no kinks in the outlet line that would inhibit or restrict flow.

WARRANTY

This pump comes with a 1 year warranty. The warranty covers all parts with material or manufacturing faults. The buyer's only remedy is the replacement or repair of the defective parts. In no case can labour costs and any consequential damage be cited as a basis for a complaint. Any returned units must be complete and must be accompanied by a written list of the defects ascertained.

We are unable to accept any liability in case of nonconforming installation or noncompliance with the specifications or maintenance recommendations.

CONFORMITY



All data contained in these specifications are solely intended to describe the product and do not constitute warranted characteristics in the legal sense. Subject to technical change.